

Table of Contents

Package Contents LED Indicators & Buttons Hardware Installation	2 3 4
Software Setup	
Using Mac computer	5
Using iPhone/iPad	6
Using Android phone or tablet	7
Using Microsoft Windows 10 WiFi	8
Using Ethernet cable (optional, Windows only)	14



Camp Pro Mini 2 Package Contents:



• 1 x DC power adapter for R36A Router



• 1 x USB cable for connecting R36A Router and AWUS036NH



• 1 x Optional Ethernet cable for connecting R36A Router and computer

Device Overview



Back Panel



Front Panel

Interface	Functional Descriptions
PoE LAN1 / LAN2	Ethernet ports are set as LAN to share Internet access via Ethernet with desktop/laptop computer(s) or network peripherals
USB	Used to connect USB cable to AWUS036NH
ANT	ANT port is used to connect 1 x indoor omni-antenna
PWR	Used to connect to the power adapter

LED Indicators & Buttons





LED Indicator	Descriptions
PWR (Blue)	On - Power on Off - No power
SYS (Blue)	On - Device is running properly Blinking - Device is sending or receiving data
LAN1 / LAN2 (Blue)	On - LAN port is connected Off - No connection on the LAN port Flashing - LAN port is sending or receiving data
RESET Button (located in bottom of R36A Router)	Toggle RESET button once - reboots device with current parameters Press RESET button and hold in for 10 seconds, then release - reboots device with factory default parameters. Allow two minutes after reset is triggered for device to fully reboot.

Hardware Installation



- 1. Attach one of the Omni-antennas to AWUS036NH.
- 2. Attach the other Omni-antenna to the R36A router.
- 3. Connect AWUS036NH to R36A router using USB cable provided.
- 4. Connect the power adapter to R36A router. Allow 90 seconds for R36A to fully boot up.
- Mount the AWUS036NH on or near a window to allow for the best reception. If no window is nearby, place on a tabletop or shelf with the antenna pointing upward as shown in step 1.





USB device not found

Please insert ALFA Network USB wireless adapter in the USB port This page will be refreshed automatically

If you see this error during setup, be sure your AWUS036NH is fully connected to the USB port on the R36A router using included USB cable

Using Mac Computer to Access Setup

Via Wifl Connection

On your Mac computer, click the WiFi icon at the top right of your screen.

Look for the WiFi network called "WiFiCampPro2-xxxxxx" and connect to it.

	4	(î;
Wi-Fi: Looking for Networks Turn Wi-Fi Off		
✓ WiFiCampPro2-A726C8		((i;
2A8734		÷
2AABEC		(;

Open your web browser, and type "alfa.myalfasetup.com" or "192.168.36.1" in the address bar.

Safari	File	Edit	View	History	Bookmarks	Window	Help
••						- 192.168.3	36.1
m	00	>	@		-		

Log In to the Router

On the main page create an administrator password and repeat the password in the second box. Then click "**Submit**".

lease s	etup the password to access setup in the future
Login	
admi	n
Passwe	ord
Repeat	password



Using iPhone / iPad to Access Setup



"alfa.myalfasetup.com" or "192.168.36.1" in the address bar

Log In to the Router

On the main page create an administrator password and repeat the password in the second box. Then click "**Submit**".

Denen natur I	the password to passage eature in the future
Please setup i	ine password to access setup in the lutur
Login	
admin	
Password	
•••••	
Repeat pass	word



Using Android Device to Access Setup

Via WiFi Connection

On your Android phone or tablet, go to Settings > WiFi and connect to the network called "WiFiCampPro2-xxxxxx"



Open your web browser app (like Google Chrome), and type in "alfa.myalfasetup.com" or "192.168.36.1" in the address bar.

Or scan QR code on top of R36A router using your phone's QR code reader app.





Log In to the Router

On the main page create an administrator password and repeat the password in the second box. Then click "**Submit**".

Pleas	e setup the password to access setup in the future
Log	in
а	dmin
Pas	sword
•	
Rep	eat password
•	



Using Microsoft Windows to Access Setup

Via WiFi Connection

On your Microsoft Windows computer, click on the WiFi 🧖 icon at the bottom right corner of the screen.

Look for the WiFi network called "WiFiCampPro2-xxxxx" and connect to it.



× +

Open your web browser, and type-in "alfa.myalfasetup.com" or "192.168.36.1" in the address bar.

Log In to the Router

On the main page create an administrator password and repeat the password in the second box. Then click "**Submit**".

New Tab

 $\leftarrow \rightarrow C$ (S) 192,168,36,1

Please setup your device Login admin Pesseord passeord
Please setup your device Login admin Pesseord passeord
Login admin Password password
admin Password password
Password password
password
Repeat password
repeat password again
Submit



Setup (For All Device Types)

Connecting to Campground or Hotspot Internet

After logging-in, the setup wizard will scan for nearby WiFi signals automatically. The list of available signals will be displayed on the screen.

If you have previously set up your Camp Pro Mini you may need to click or tap "**Easy Setup**" on the top left of your screen to bring up the scan window.

- Click or tap the name of your campground network or the network you wish to extend



- Click or tap the blue Select> button on the right of the screen.

Pick netwo	ork to extend					×
÷	Network Name (SSID)	¢	Signal	¢	CH ¢	MAC \$
	ROBA-ADDICES		100% (-35dBm)		7	BE CE CA 46 BC CA
⋳	107-040		91% (-48dBm)		6	$m_{\rm eff} \approx m_{\rm eff} \approx m_{\rm eff}$
⋳	Campground-WiFi-Name		91% (-48dBm)			Select >
	Ration, 240, Date		80% (-57dBm)		9	cim 2
⋳	Ration, 200, None		77% (-59dBm)		9	\bigcirc ru

Setup

- In the Hotspot Configuration menu, enter the Wi-Fi password for the campground WiFi or the network you are extending into the **Hotspot Password** field.

Hotspot configuration		
Connect your CampPro to camp ground or other	Wi-Fi signal	
Hotspot Name	Campground-WiFi-Name	\bigcirc
	Click here to pick the network you want to extend	
Lock Hotspot MAC	Off	
	Only try to connect this AP	
Encryption	WPA2-PSK	*
Hotspot Password		Ê
	Enter the password for the network you are extending (if you do not know it, contact your camp ground support))
Network Type	Dynamic (DHCP)	~
Hostname	WiFiCampPro2	
DNS server	Auto	~
Clone MAC address	00:C0:CA:98:84:67	

The Hotspot Password is the security key or passkey for your campground network or the network you are trying to extend

Secure Wireless Network for Your Smartphones, Tablet, and Computers

- Then, in the "Network Password" field, create a new password to secure your WiFiCamp-

Pro2 Wi-Fi network. You will be prompted for this password when connecting other

devices.

Internet configuration	n		
Network Name	WiFiCampPro2-AB133A		
Network Password		Û	
	• password must be at least 8 characters long		

- You can make your password anything you want as long as the password is eight

characters or longer. This is all you need to do on this screen.

Then click "Finish" and read on-screen instructions.

Setup

Please wait 60 seconds for password to be verifed. This screen should be shown:



Internet Access Via Wireless Connection

After 60 seconds, on your computer or device find the network named "WiFiCampPro2-xxxxx", then connect to it again. Because the network is now password protected, you will be prompted for your password.

NOTE You should now be connected. Open your web browser and try to connect to the Internet.

Connection status will be shown on the status screen.

ALFA NETWORK		Internet Status CONNECTED Firmware Version v1.22 US
Internet Status		
Туре	USB Wireless	
SSID	WiFi-Arris [F8:A0:97:02:1C:76]	
RSSI (Bitrate)	-54 dBm (72.2 Mbit/s)	
Address	192.168.0.58 / 255.255.255.0	
Gateway	192.168.0.1	
DNS	68.105.28.15 68.105.29.15 68.105.28.17	
Expires	3350	
Uptime	250	
Session	149	



Clicking on the " **Status** " on left control panel will refresh your status screen.

All other company or product, service names mentioned herein are trademarks or registered trademarks of the respective companies. Product information / content in this installation guideline may be changed or updated without prior notice.

DOC NO.: QIG-WiFiCampPro2mini-EN-1.0



This screen appears when there is an error in the "Hotspot Password" section.



Click the red "**Retry**" button and ensure the password is typed correctly in the "**Hotspot Password**" section. Be aware of capital letters or numbers. If on a mobile device make sure the first letter is not being auto-capitalized.

Hotspot configuration			
Connect your CampPro to camp ground or other Wi-Fi signal			
Hotspot Name	Campground-WiFi-Name		
	O Click here to pick the network you want to extend		
Lock Hotspot MAC	Off		
	Only try to connect this AP		
Encryption	WPA2-PSK		
Hotspot Password	e		
	Enter the password for the network you are extending (if you do not know it, contact your camp ground support)		
Network Type	Dynamic (DHCP)		
Hostname	WiFiCampPro2		
DNS server	Auto		
Clone MAC address	00:C0:CA:98:84:67		

If the WiFi Authentication fails again check with your Campground/Hotspot provider to ensure they have not changed passwords since you first received the password.

Setup - Troubleshooting

Can't reach this page/Site can't be reached

Make sure computer or device is connected to WiFiCampPro2-xxxxx WiFi network.

If computer or device is connected to a different WiFi network, the setup IP address will not work.

If computer or device is connected to WiFiCampPro2-xxxxx WiFi network but nothing happens when going to 192.168.36.1 for setup, do a factory reset.





ERR_CONNECTION_TIMED_OUT

Factory Reset:

With R36A powered on, press and hold the reset button on the bottom side of the case for 10 full seconds until all lights begin flashing rapidly. Wait 120 seconds for the device to fully finish resetting.

Now you should be able to reconnect your device via WiFi connection to the WiFiCamp-Pro2-xxxxx WiFi network, and then try loading the 192.168.36.1



Setup Using Microsoft Windows Wired Connection

Internet Access Via Wired Connection

Connect Ethernet cable to you computer and then to the R36A router via the LAN1 port.

When Ethernet connection is made, the LAN1 LED will be "ON".



Then Open your web browser, and type-in "alfa.myalfasetup.com" or "192.168.36.1" in the address bar.

New Tab	× +
$\leftrightarrow \rightarrow c$	192.168.36.1

Log In to the Router

On the main page create an administrator password and repeat the password in the second box. Then click "**Submit**".

ALFA N E T W O R K
Please setup your device
admin
Password
password
Repeat password
repeat password again
Submit

Setup using Microsoft Windows Wired Connection

Connecting to Campground or Hotspot Internet

After logging-in, the setup wizard will scan for nearby WiFi signals automatically. The list of available signals will be displayed on the screen.

If you have previously set up your Camp Pro Mini you may need to click or tap "**Easy Setup**" on the top left of your screen to bring up the scan window.

- Click or tap the name of your campground network or the network you wish to extend



- Click or tap the blue Select button on the right of the screen.

Pick netwo	ork to extend						×
¢	Network Name (SSID)	¢	Signal	¢	CH 🕈	MAC	۰
	R384-408CC4		100% (-35dBm)		7	80-C2-CA-46-8C-C4	
⋳	107-040		91% (-48dBm)		6	19.40 (17.52) < 75	
₿	Campground-WiFi-Name		91% (-48dBm)			Select >	
	Ration, 240, Date		80% (-57dBm)		9	cm 2	
٥	Ration, 2002, Nova		77% (-59dBm)		9	\bigcirc \sim	

Setup using Microsoft Windows Wired Connection

- In the Hotspot Configuration menu, enter the Wi-Fi password for the campground WiFi or the network you are extending, into the **Hotspot Password** field.

Connect your CampPro to camp ground or other \	Wi-Ei signal	
Hotspot Name	Campground-WiFi-Name	\bigcirc
	Click here to pick the network you want to extend	
Lock Hotspot MAC	Off	
	Only try to connect this AP	
Encryption	WPA2-PSK	~
Understand Deservered		A
Hotspot Password		
	 Enter the password for the network you are extending (if you do not know it, contact your camp ground support 	
Network Type	Dynamic (DHCP)	~
Hostname	WiFiCampPro2	
DNS server	Auto	~
Clone MAC address	00:C0:CA:98:84:67	

The Hotspot Password is the security key or passkey for your campground network or the network you are trying to extend

Secure Wireless Network for Your Smartphones, Tablet, and Computers

- Then, in the "Network Password" field, create a new password to secure your WiFiCamp-

Pro2 Wi-Fi network. You will be prompted for this password when connecting other

devices.

Internet configuration	n		
Network Name	WiFiCampPro2-AB133A		
Network Password		Ê	
	• password must be at least 8 characters long		

- You can make your password anything you want as long as the password is eight

characters or longer. This is all you need to do on this screen.

Then click "Finish" and read on-screen instructions.

Setup using Microsoft Windows Wired Connection

Please wait 60 seconds for password to be verifed. This screen should be shown:



Internet Access Via Wired Connection

NOTE You should now be connected. Open your web browser and try to connect to the Internet.

Connection status will be shown on the status screen.

/ / .	Eirmwara	Version v1 22
NETWORK	ninware	version viac
lnternet Status		
Туре	USB Wireless	
SSID	WiFi-Arris [F8:A0:97:02:1C:76]	
RSSI (Bitrate)	-54 dBm (72.2 Mbit/s)	
Address	192.168.0.58 / 255.255.255.0	
Gateway	192.168.0.1	
DNS	68.105.28.15 68.105.29.15 68.105.28.17	
Expires	3350	

You may now connect other wireless devices such as tablets or cell phones to the Wifi Camp Pro Network.



All other company or product, service names mentioned herein are trademarks or registered trademarks of the respective companies. Product information / content in this installation guideline may be changed or updated without prior notice.

DOC NO.: QIG-WiFiCampPro2mini-EN-1.0